 




STAND /WALL POWERFUL FAN (remote)

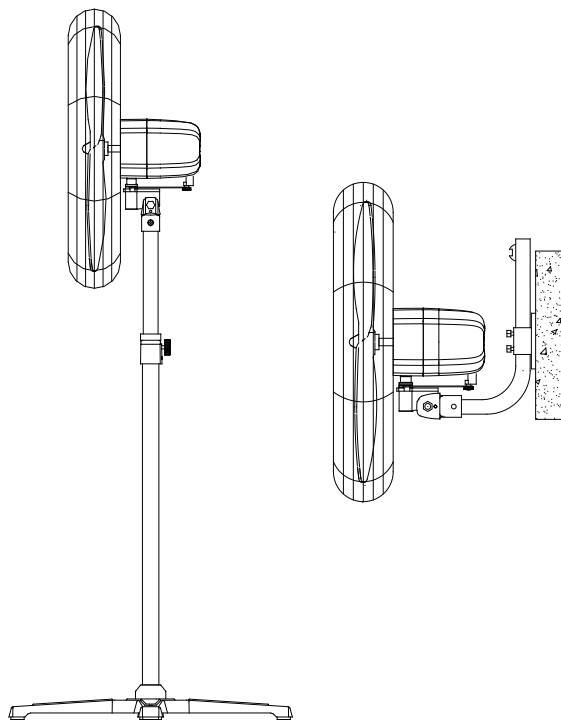

INSTRUCTION MANUAL

Please read the instructions carefully before use.

Cautions

- 1.Ensure that the fan is switched off from the supply mains before removing the guard.
- 2.The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely. Young children should be supervised to ensure that they do not play with the appliance.
- 3.Type Y attachment - Damaged supply cords to be replaced by the manufacturer, service agent or similarly qualified person to avoid hazard.
- 4.When the fan is not in use for a long time, the power supply should be cut off.
- 5.There is a high voltage circuit inside the motor, except for the scope of maintenance allowed in this specification, non-professional personnel may not disassemble and repair the fan or modify it by themselves.

Maintenances

1. The fan must be cleaned periodically to keep clean and attractive.
2. Open the net ring, remove the net(2)and blade(3).Use mild detergent or alcohol to clean off the dirt on the fan.
3. Don't web the motor during cleaning.
4. Assemble the fan after cleaning. Be sure the blade is properly fixed in the bearing, close the four clips and fix the screw in the guard.
5. After assembling, run fan with a slim pole to ensure well-balance and have no grating.

 
Feature And Application

- 1.Heavy duty application and well-balanced fan blade for steady operation and high air delivery.
- 2.The motor is controlled by microcomputer and power electronic device, 19 speed selection, full function radio frequency remote control. The remote control has timing shutdown function and it can control fan through the wall .
- 3.The blade is driven by the motor, which has stable performance and long life.
- 4.Adjustable height and speed.
- 5.Ideal for cool-down, ventilation, heatstroke prevention to improve the environment in the public place warehouses, restaurants, workshop, mining area and other places.


Operating Instruction

1. Refer to assembly scheme to assemble the fan, before assembling, please check parts carefully if any damage during shipment.
2. Move blade before operation, check if flexible and any rubbing with other parts, (Don't deform the blade).
3. The voltage and frequency should be the same as the motor label fixed. Don't use it in corrosive and other wet environment.
4. Don't use the fan beyond the height of elevation 1000 meters and don't use in place with temperature over 40°C.
5. The way to use the fan control panel: Turn on the power and the standby light on the fan control panel lights up. Press the "ON/OFF" button and the fan starts. The display lights up and displays the current fan speed; each time you press the "-" button, the fan speed will decrease one stage, until the minimum is 500rpm; each time you press the "+" button, the fan speed will increase one stage, until the maximum is 1400rpm; Press the "SWING" button, the fan rotates, and then press the "SWING" button, the fan stops rotation; Press the ON/OFF" button again, the fan stops rotating and enters the standby state.
6. The way to use remote control: The remote control is equipped with 2 "AAA" batteries. The remote control is one set and one code which has been paired before leaving the factory. If you replace the remote control, you need to re-code the code. The code is in the standby state. Press the "-" button and "+" button on the fan control panel at the same time for 3 seconds. By hearing a "B" sound in the motor, and then press the "ON/OFF" button on the remote control until the fan rotates and then let go to complete the code matching; The "ON/OFF" button, "-" button, "+" button and "SWING" button on the remote control have the same functions as the corresponding buttons on the fan panel; the "Timer" button is the timing button. Every time you press, one hour is added at once, and the display on the fan control panel displays 1H, 2H, 3H, 4H, 5H, 6H, 7H, 8H. Press the 9th time to cancel the timing function and the display shows the current speed. In the timing state, the display screen alternately displays the timing time and speed every 10 seconds; The "Memory" button is a memory button. After pressing it, it will remember the running state of the fan before power off. When restarting, it will run in the memory state, and press it again to cancel the memory state.
7. Height adjustable of stand fan and wall fan :
 - a. Raise the height of stand fan: Hold firmly the inner lifting pole (5) or upper joint (13), loosen the fixing screw (12), set the fan to the required height, tighten the screw (12) and move the rubber washer (6) to the lowest end.
 - b. Lower: Hold firmly the inner lifting pole (5) or upper joint (13), loosen the fixing screw (12), to slowly lower the fan to the desired position and tighten the screw (12).
 - c. Adjust the height of wall fan: Hold firmly the wall mount tube and the fan head, loosen the 2 screws between the wall mount tube & the wall mount plate, move up or down the wall mount tube to desired position, then fix the 2 screws (Warning: Ensure the 2 screws are securely fixed).
8. Please attend to our remark: "INDOOR USE ONLY!"
9. Power supply must be cut and the blade is at rest when adjusting the height and the swing angle of the fan.
10. To be careful when the fan is used near the opened window, curtain portiere or foliage.
11. The wall fan should be installed 2.3 meters or more above the ground.


Wiring Drawing

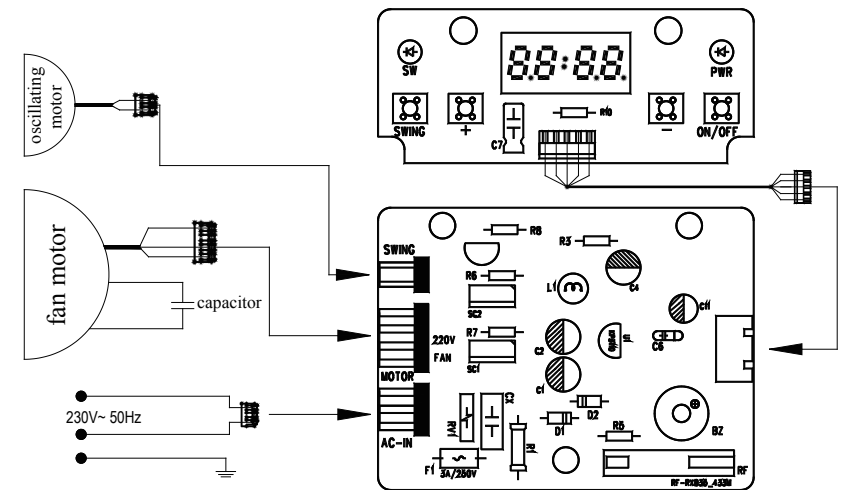

Fan Control Panel

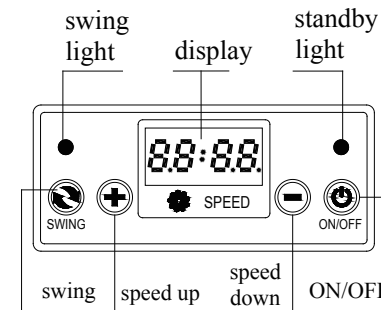 



Remote Control

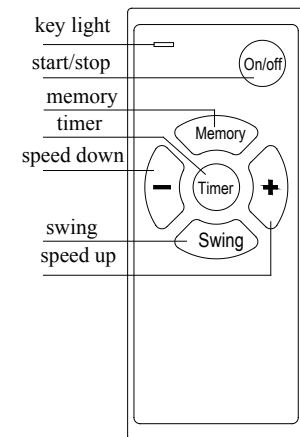 

Specification

Model	R.P.M.		Air volume (m ³ /min)		Noise (dB)		Power (W)	
	Lowest	Highest	Lowest	Highest	Lowest	Highest	Lowest	Highest
20" STAND POWERFUL FAN (remote) 20" WALL POWERFUL FAN (remote)	500	1400	22	120	47	55	50	105
24" STAND POWERFUL FAN (remote) 24" WALL POWERFUL FAN (remote)	500	1400	32	175	48	65	50	130
26" STAND POWERFUL FAN (remote) 26" WALL POWERFUL FAN (remote)	500	1400	38	195	49	68	60	140
30" STAND POWERFUL FAN (remote) 30" WALL POWERFUL FAN (remote)	500	1400	65	270	50	73	70	200

  Specifications are subject to change without prior notice due to continuous product improvement.

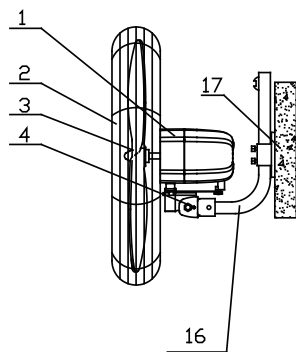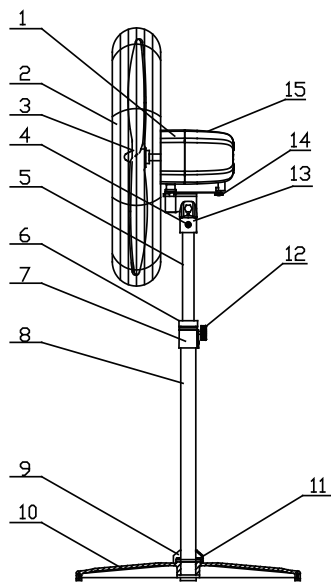

1. Motor

2. Front guard & back guard

3. Blade

4. Holding screw

5. Inner lifting pole

6. Rubber washer

7. Lower joint

8. Lower standing pole

9. Decorative cover
10. Base

11. Screw

12. Fixing screw

13. Upper joint

 
14. Oscillation adjusting screw

15. Fan control panel



16. Wall mount tube

17. Wall mount plate

Assembly scheme

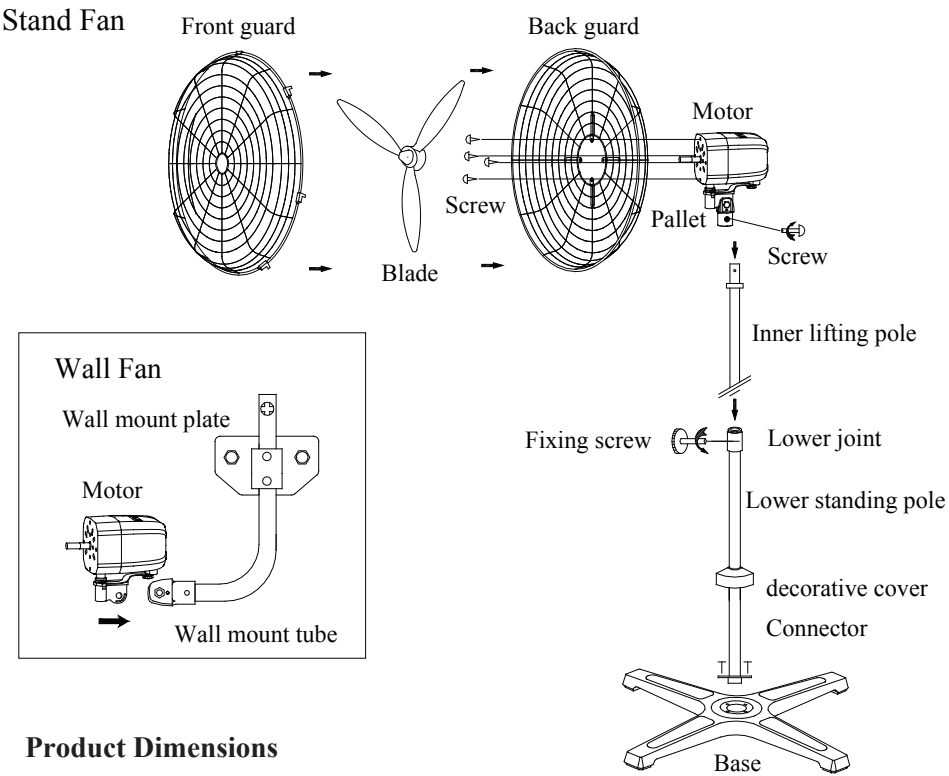

Product Dimensions

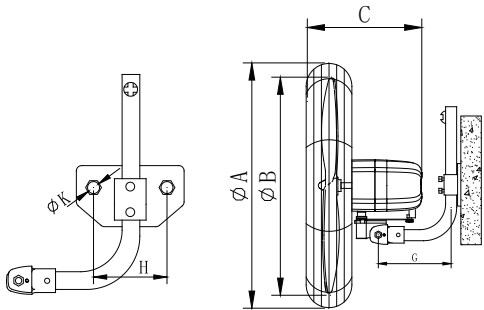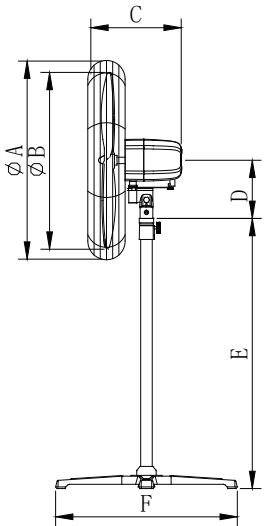  

Parameter Model	Item									
	A	B	C	D	E	F	G	H	K	L
20"	560	500	330	205	765	600	250	125	13	1320
24"	660	600	340	205	765	600	250	125	13	1320
26"	715	650	340	205	965	660	250	125	13	1520
30"	815	750	350	205	965	660	250	125	13	1520

Stand Fan